


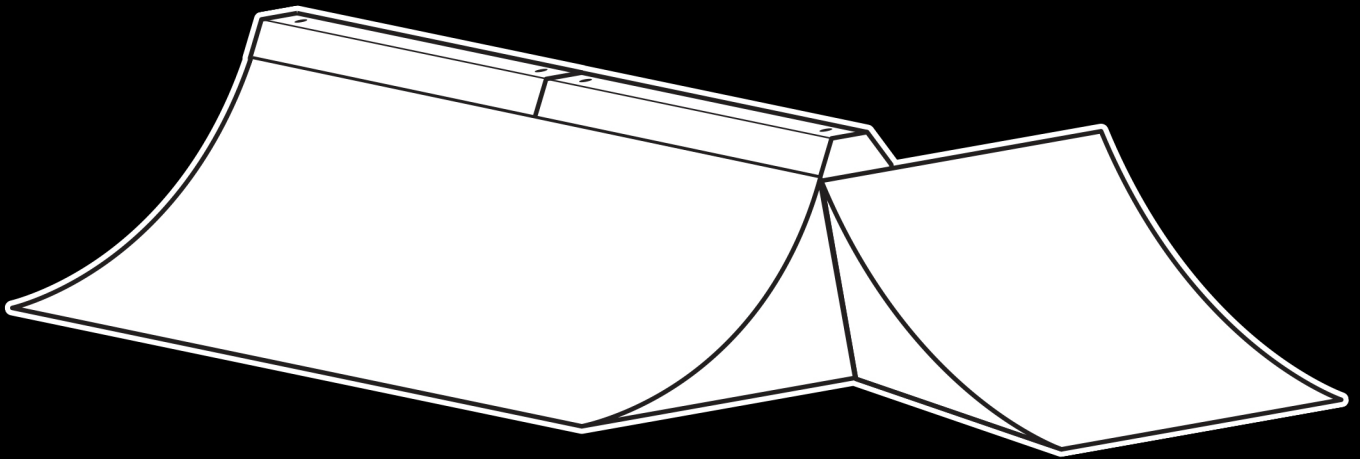

CEMENT HIP

\$200.00*



TOOLS:

5 gallon buckets	\$3
2 finishing trowels	\$50

MATERIALS:

(8) 8x8x16 Cinder Blocks	\$16
12 bags of quick crete	\$50
3 bags of Portland Cement	\$15
1 bag of Cement all	\$10
15 gallons of water	FREE
1 sheet 4x8 1/2" plywood	\$20
4 2x4's	\$15
1 Sheet of Concrete Mesh	\$10
2 Tubes of Liquid Nails	\$8
2 parking blocks	find some

* Total price is a rough estimate.

INSTRUCTIONS:

Step Basics:

Cut the templates for the transitions out of plywood.

Stack the cinder blocks up using liquid nail to secure them while building a wall the height of the transitions.

Place parking blocks on top of cinder blocks.

Fill in transition frame with rock or dirt or anything you can find as fill.

Place concrete mesh over back fill leaving about two inches for concrete.

Start filling in with Quick Crete first then add Portland to the mix for the top layer which gives it a smoother finish.

Let dry then use cement all to fill in the crack and make it flush to the ground.